



OWH80 Series

Programmable Power Supply

Programming Manual

For product support, visit: www.owon.com.hk/download

※:The illustrations, interface, icons and characters in the user manual may be slightly different from the actual product. Please refer to the actual product.

Jan. 2026 edition V1.0.0

Copyright © LILLIPUT Company. All rights reserved.

The LILLIPUT's products are under the protection of the patent rights, including ones which have already obtained the patent rights and those which are applying for. The information in this manual will replace all that in the materials published originally.

The information in this manual was correct at the time of printing. However, LILLIPUT will continue to improve products and reserves the rights to change specification at any time without notice.

owon[®] is the registered trademark of the LILLIPUT Company.

Fujian LILLIPUT Optoelectronics Technology Co., Ltd.

No. 19, Heming Road

Lantian Industrial Zone, Zhangzhou 363005 P.R. China

Tel: +86-596-2130430

Fax: +86-596-2109272

Web: www.owon.com.cn

E-mail: info@owon.com.cn

Table of Contents

1. System Command	1
SYSTem:VERSion?	1
SYSTem:LOCal	1
SYSTem:REMOte	2
2. Output Command	3
OUTPut	3
3. Control Command	4
VOLTage	4
VOLTage:LIMit	4
VOLTage: SLOPe	5
CURRent	5
CURRent:LIMit	6
CURRent:SLOPe	6
4. Measurement Command	8
MEASure:VOLTage	8
MEASure:CURRent	8
MEASure:POWer	9
MEASure:ALL	9
5. System Configure Command	10
CONFigure:OUTPut:MODE	10
FUNCTion:PRIOritY	10
6. Protection Command	12
OVP,OCP,OPP	12
7. LIST Waveform Command	13
LIST	13

1. System Command

SYSTem:VERSion?

Syntax:

SYSTem:VERSion?

Description:

Looks up the version of the SCPI command currently in use.

Parameter:

None.

Example:

SYST:VERS?

Return:V1.0.0

SYSTem:LOCal

Syntax:

SYSTem:LOCal

Description:

Power off to remote control mode via communication interface (USB,RS485,LAN). At this point, the panel key resumes the operation.

Parameter:

None.

Example:

SYST:LOC?

Return:None.

SYSTem:REMOte

Syntax:

SYSTem:REMOte

Description:

Set the power supply to remote control mode through the communication interface (USB,RS485,LAN). At this time, the panel key is locked and cannot be operated. All control commands need to be operated after this command.

Parameter:

None.

Example:

SYST:REM?

Return:None.

2. Output Command

OUTPut

Syntax:

OUTPut[:STATe]{0|1|ON|OFF}
OUTPut[:STATe]?

Description:

Control the output status of the currently selected channel.

Parameter:

- Open: 1 or ON;
- Close: 0 or OFF.

Example:

- (1) Turn on the output of the channel.

OUTP ON

- (2) Query the channel output status, if the channel has output, it returns 1, otherwise it returns 0.

OUTP?

Return:1

- (3) Set the output mode.

CONFigure:OUTPut:MODE CCCV

- (4) Query the output mode.

CONFigure:OUTPut:MODE?

Return:CCCV

3. Control Command

VOLTage

Syntax:

```
[SOURce:]VOLTage[:LEVel][:IMMediate][:AMPLitude]<value>  
[SOURce:]VOLTage[:LEVel][:IMMediate][:AMPLitude]?
```

Description:

Set and query the output voltage value.

Parameter:

- Value: The value of the output voltage to be set in floating point characters.

Example:

- (1) Set the channel output voltage to 10V.

VOLT 10

- (2) Query the channel output voltage.

VOLT?

Return: 10.000

VOLTage:LIMit

Syntax:

```
[SOURce:]VOLTage:LIMit[:LEVel][:IMMediate][:AMPLitude]?
```

Description:

Query the maximum and minimum voltage output limit value.

Parameter:

- value: |MIN|MAX|NRf|

Example:

- (1) Query the output voltage limit.

VOLT:LIM?

Return:10.000

VOLTage: SLOPe

Syntax:

```
[SOURce:]VOLTage:SLOPe[:LEVel][:IMMediate][:AMPLitude]<value>  
[SOURce:]VOLTage:SLOPe[:LEVel][:IMMediate][:AMPLitude]?
```

Description:

Set and query the power supply voltage output rise and fall slope.

Parameter:

- value: |MIN|MAX|NRf|

Example:

- (1) The output rise and fall slopes of the voltage are set to be 0.1V.

VOLT:SLOP 0.1

- (2) Query the output rise and fall slopes of voltage.

VOLT:SLOP?

Return:0.1

CURRent

Syntax:

```
[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude]<value>  
[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude]?
```

Description:

Set and query the output current.

Parameter:

- Value: |MIN|MAX|NRf|, Output current value to be set, number of floating point characters.

Example:

- (1) Set the channel output current to 1A.

CURR 1

(2) Query the channel output current.

CURR?

Return:1.000

CURRent:LIMit

Syntax:

[SOURce:]CURRent:LIMit[:LEVel][:IMMediate][:AMPLitude]?

Description:

Query maximum and minimum current output limit value.

Parameter:

- value: |MIN|MAX|NRf|

Example:

(1) Query the output current limit.

CURR:LIM?

Return:1.000

CURRent:SLOPe

Syntax:

[SOURce:]CURRent:SLOPe[:LEVel][:IMMediate][:AMPLitude]<value>
[SOURce:]CURRent:SLOPe[:LEVel][:IMMediate][:AMPLitude]?

Description:

Set and query the rising and falling slope.

Parameter:

- value: |MIN|MAX|NRf|

Example:

(1) The output rise and fall slopes are set to be 0.1A.

CURR:SLOP 0.1

(2) Query the output rise and fall slopes.

CURR:SLOP?

Return:0.1

4. Measurement Command

MEASure:VOLTage

Syntax:

MEASure[:SCALar]:VOLTage[:DC]?

Description:

Query the output voltage.

Parameter:

None.

Example:

(1) Query the output voltage.

MEAS:VOLT?

Return:10.000

MEASure:CURREnt

Syntax:

MEASure[:SCALar]:CURREnt[:DC]?

Description:

Query the output current.

Parameter:

None.

Example:

(1) Query the output current.

MEAS:CURREnt?

Return:1.000

MEASure:POWer

Syntax:

MEASure[:SCALar]:POWer[:DC]?

Description:

Query the output power.

Parameter:

None.

Example:

(1) Query the output power.

MEAS:POW?

Return:100.0

MEASure:ALL

Syntax:

MEASure[:SCALar]:ALL[:DC]?

MEASure[:SCALar]:ALL[:DC]:INFO?

Description:

Query the output voltage, output current, output power.

Parameter:

None.

Example:

(1) Query the output voltage and output current.

MEAS:ALL?

Return:10.000,2.000

(2) Query the output voltage, output current and output power.

MEAS:ALL:INFO?

Return:10.000,2.000,20.0

5. System Configure Command

CONFigure:OUTPut:MODE

Syntax:

CONFigure:OUTPut:MODE{CCCV|LIST|PV|APG}
CONFigure:OUTPut:MODE?

Description:

Set and query the output mode.

Parameter:

Value CCCV|LIST

Example:

- (1) Set the power supply to work in LIST mode.

CONF:OUTP:MODE LIST

- (2) Query the power supply work status.

CONF:OUTP:MODE?

Return:LIST

FUNCTion:PRlarity

Syntax:

FUNCTion:PRlarity{CV|CC|VOLTAGE|CURRENT}
FUNCTion:PRlarity?

Description:

Set and query the output priority mode.

Parameter:

Value CV|CC|VOLTAGE|CURRENT

Example:

- (1) Set the output of the power supply to CC priority.

FUNC:PRI CC

- (2) Query the output priority mode.

FUNC:PRI?

Return: 0

6. Protection Command

OVP,OCP,OPP

Syntax:

```
[SOURce:]VOLTage:PROTection[:LEVel]<value_f>  
[SOURce:]VOLTage:PROTection[:LEVel]?  
[SOURce:]CURRent:PROTection[:LEVel]<value_f>  
[SOURce:]CURRent:PROTection[:LEVel]?  
[SOURce:]POWer:PROTection[:LEVel]<value_f>  
[SOURce:]POWer:PROTection[:LEVel]?
```

Parameter:

- Value_f: |NRf|

Description:

- VOLT:PROT ---> Set OVP protection value.
- CURR:PROT ---> Set OCP protection value.
- POW:PROT ---> Set OPP protection value.

Example:

1. VOLT:PROT 85.0
2. CURR:PROT 25.0
3. POW:PROT 1000.0

7. LIST Waveform Command

LIST

Syntax:

[SOURce:]LIST:MODE {AUTO|MANUAL}
[SOURce:] LIST:MODE?

[SOURce:]LIST:STEP<value_i (1--100)>
[SOURce:]LIST:STEP?

[SOURce:]LIST:INDex<value_i (1--100)>
[SOURce:]LIST:INDex?

[SOURce:]LIST:VOLTage<value_f>
[SOURce:]LIST:VOLTage?

[SOURce:]LIST:CURREnt<value_f>
[SOURce:]LIST:CURREnt?

[SOURce:]LIST:TIMEr<value_f>
[SOURce:]LIST:TIMEr?

[SOURce:]LIST:CYCLe<value_i (0--9999)>
[SOURce:]LIST:CYCLe?

[SOURce:]LIST:LOAD
[SOURce:]LIST:TRIG

Parameter:

- Value_f: |NRf|
- Value_i: |NRI|

Description:

LIST:MODE----select LIST mode status.

LIST:STEP----set LIST execution steps.

LIST:INDex----set storage location index (1-100).

LIST:VOLT----set voltage of current index.

LIST:CURREnt----set current of current index.

LIST:TIME----set execution time of current index(the minimum execution time is 1S=1)

LIST: CYCL----set the number of loops for the total LIST.

LIST:LOAD----load the LIST table to the DSP.

LIST:TRIG----triggers the DSP to run the LIST list output

Example:

1. CONF:OUTP:MODE LIST
2. LIST:MODE AUTO
3. LIST:STEP 10
4. LIST:CYCI 0
5. LIST:INDex 1

1) LIST:VOLT 12.0

2) LIST:CURR 1.0

3) LIST:TIME 1

Repeat the number of times you set step 5 to step 3, depending on the index.

6. LIST:LOAD
7. OUTP ON(Execute the LIST function)
8. LIST:TRIG(Use in MANUAL mode setting)